



1750 Brielle Avenue
Ocean, NJ 07712

www.cemteksinstruments.com

Phil McMaster
(919) 796-8715
pmcmaster@cemteks.com

Ty Smith
(732) 493-6370
ty@cemteks.com



**Analyzers by AP2E*

CEMGAS CH₂O/HCHO ANALYZER ADVANTAGES AND BENEFITS:

- Interference Free Gas Measurement
- Direct Measurement
 - Sample Conditioning
 - No Moisture Removal
 - Low Temperature Sampling
- Low Maintenance
- Pre-Calibrated
 - Prime Measurement
 - No Re-Zero
- Clean Sample Technology
 - Low- Pressure
 - Low-Flow



CH₂O/HCHO molecule

CEMGAS 5000 CH₂O/HCHO Laser Analyzer*

Direct CH₂O/HCHO Laser Measurements - Low Pressure
Sampling - Extremely High Resolution Laser

This analyzer is a complete reliable, robust, easy-to-use, low cost solution for formaldehyde analysis in ambient air, coal-fired applications, boilers and all other emissions sources. Equipped with Optical Feedback Cavity Enhanced Absorption Spectroscopy (OFCEAS) IR technology this low maintenance analyzer offers superior measurement performance with no interference.

It comes pre-calibrated for your application and it offers low level formaldehyde detection with measuring capabilities of as little as 1ppb and a response time of less than 2 seconds. It contains no optical moving parts and it is characterized by MTBF's of 5 years.

Available in both rack and wall mount options it includes a touch screen interface and on-board PC for local/remote control and the real time display/recording of results.

DIRECT MEASUREMENT.

No sample pre-treatment.

Enables direct measurement. The low pressure in the sampling system minimizes any risk for chemicals absorption/desorption and/or condensation in the line.

CLEAN SAMPLE TECHNOLOGY

The low pressure sampling system enables low flow rates 3-9L/h (0.11-0.33 cfm) without degrading response time. Accumulation of contaminants in lines and filters are greatly reduced.

EASE-OF-USE AND INTEGRATION

The CEMGAS is pre-calibrated for the CEM's application. Initially packaged in a standard 19" rack, it includes a touch screen interface and on-board PC for local control and real-time display of results. Digital outputs are Ethernet protocol; RS485, RS232 and ModBus. Analog outputs are optional.

PRIME MEASUREMENT.

No Re-zero; No Drift

CEMGAS Laser 5000 technology is a prime measurement. The zero information is contained in the signal, enabling automated and intrinsic re-zero of the analyzer.

ROBUST LOW MAINTENANCE

In addition to containing no moving optical components, the IR sources (telecom laser) are characterized by MTBF's of 5-10 years. Designed and built strictly for industrial and on-board mobile applications.

NO INTERFERENCE

Provides exceptional selectivity, enabling simultaneous multi-component measurement without interference, regardless of the matrix.

SAFE

ATEX compliant configuration available.

SAMPLING SYSTEM

Flow Rate: 3-9 L/h (0.11-0.33 cfm)
 Max. Temp: 600°C (1,110 F)
 Max. Humidity: H₂O (g) < 65% vol.—Standard
 H₂O (g) > 65% vol.—Study Required
 Pressure: 1atm. ± 100 mBar @ sampling point
 Sampling Line: Ambient Temp. > 10°C and H₂O < 65% vol.
 →simple polytube (no heating)
 Ambient Temp. < 10°C or H₂O > 65% col.
 →80°C heated line.

ANALYZER

Size: Standard 19" 4U rack.
 550 mm (21.9 in) depth
 Weight: 20 kg (44lbs)
 Options: Wall mounted.
 ATEX compliant integration.
 Display/Control: 5.7" diagonal color touch screen
 PC OS: Windows® XP®
 Software: WinProceas ©

INSTALLATION REQUIREMENTS

Operating Temp: 15-35°C (59-95°F) - Standard
 10-40°C (50-104°F) - Optional
 Power Requirements: 200W - 110 - 220VAC - 50-60Hz
 Compressed Air: 1-6 bar (oil free). Not provided.
 Air Cleanup Panels are available.

SAMPLING PROCESS



The Sonic Probe allows for extremely low intake flow rate which enables extremely low fouling of the sampling probe filter and reduced maintenance requirements. No moisture or particulate cleanup required.



1750 Brielle Avenue, Unit B-2
 Ocean, NJ 07712
 P: 732-493-6370
 F: 732-493-6180
www.cemtekinstruments.com

DATA I/O

Standard: Ethernet protocol; RS 485,
 RS 232; ModBus
 Optional: Analog I/O; TDR I/O.
 Other I/O's on request

ANALYTICAL SPECIFICATIONS



Response Time: < 2 seconds
 (with sample transfer time)
 Zero Drift: none

Gas	Range ^a		LOD ^b	
	min	max	min	max
CH ₂ O/ HCHO	10 ppm	1%	1ppb	10 ppm

^a adjustable range on request
^b limit of detection 3 Sigma

PRINCIPLE OF OPERATIONS

Optical Feedback Cavity Enhanced Absorption Spectroscopy

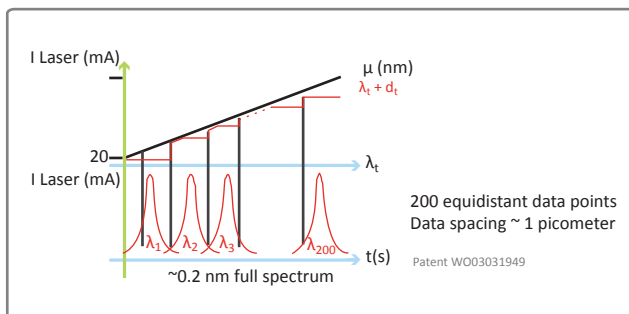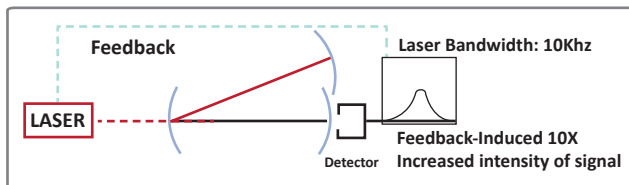

SPECTRA - 200 equidistant data points over 0,2 nm

